

# WiFiRANGER™

CONNECT & CONTROL. COMPLETELY.™



## Quick Start Guide

ADDITIONAL INFORMATION & SUPPORT AT  
[WiFiRanger.com](http://WiFiRanger.com)

### 1. Power On WiFiRanger Sky™


Look for a toggle switch in RV labeled as WiFiRanger Sky4. Switch on and wait 2-3 minutes for the unit to find an internet signal.



Power switches vary in style & location depending on RV manufacturer.


### 2. Wirelessly connect your smartphone, tablet, or computer to Network: Pvt.WiFiRanger\_Sky4...

9560 is for example purposes only. Your Network name will have their own unique 4 digits. *Do not look for 9560.*

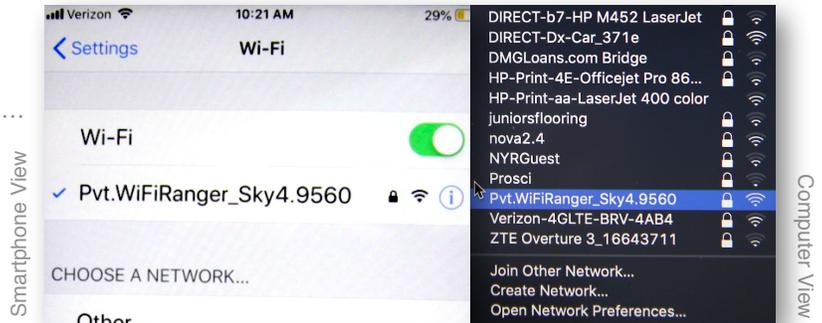


### 3. Enter Password: changemenowXXYY

For XXYY values, use the last 4 digits from your unique Network name in Step 2. Remember, your Network name will have their own unique 4 digits. *Do not try to use 9560.*

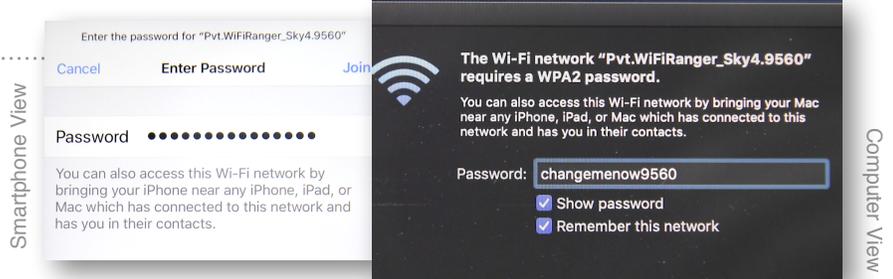

### 4. Visit 10.1XX.YY.1:8080

XXYY values are the same as described in Step 3 above. If the above numeric web address does not load in your browser, visit MyWiFiRanger.com.

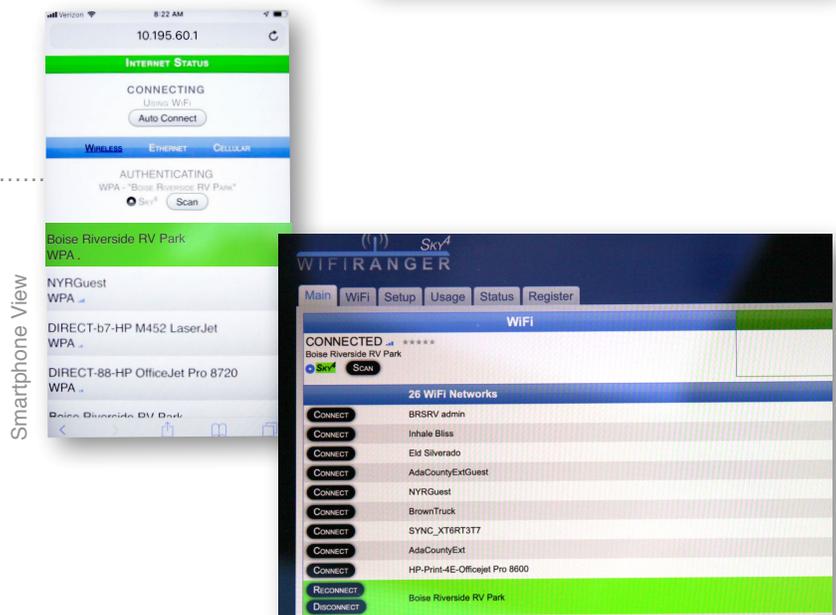

### 5. Click Scan, then connect to desired network.

The network you select may require a password from network host (e.g. RV Park office, coffee shop employees, etc.)

**IMPORTANT!**  
Keep this Guide for RV Owners